



**Safety Technology  
International, Inc.**

## **UNIVERSAL STOPPER® SERIES**



## **INSTALLATION INSTRUCTIONS**

### **Features**

- Can be used as a guard against physical damage to a device with or without optional warning horn.
- Cover locking tab to help prevent tampering.
- Optional horn has choice of 95 or 105 dB at 1 ft.
- Three year guarantee against breakage of polycarbonate in normal use (one year on electro mechanical and electronic components).
- UL/cUL Listed (Enclosed Flush Backbox model pending).
- ADA Compliant.
- Waterproof Backbox, UL Listed to NEMA Type 3X Standard (pending).
- IP Rating equivalencies.

**We protect the things that protect you.**

## Parts Provided (per mounting option)

DESCRIPTION	Part No.	Qty.	Flush	Surface	Enclosed Flush Backbox	Enclosed Backbox
Cover Assembly		1	X	X	X	X
#6 x 1 1/4" Phil Pan Hd Screw	19039	4	X	X	X	X
Plastic Wall Anchor	19018	4	X	X	X	X
Cover Gasket	01316	1			X	X
Device Mounting Plate	01310	1				X
#6-32 x 1/2" Phil Flat Hd Screw	19099	6				X
#6 O-ring	01317	4				X
3/4" NPT Plug*	01309	1				X
Solid Insert*	01311	2		X		
Conduit Insert*	01312	2		X		
1/2" & 3/4" Conduit Weather Gasket	STI-6004	2		X		
3 Inch Gasket	01318	2		X		
#6-32 x 1/2" Phil Pan Hd Screw	19054	2				X

\*Available in red, green, blue, yellow, white or black. Inserts also available in clear.

## Approvals

It has been tested and approved or listed by:

- Underwriters Laboratories (Enclosed Flush Backbox model pending)
- UL Certified to meet ADA Compliance
- NEMA Type 3X Enclosed Flush Backbox and Backbox (pending)
- IP56 flush, surface and backbox with open mounting plate; IP66 backbox with sealed mounting plate

PATENTS:

United States No. 4,267,549, Canada No. 1,147,828

## Specifications

### Polycarbonate Enclosure

- Flammability - cover and frames: UL 94 V-2, enclosed backbox: UL 94 5VA
- Cover wall thickness 0.12 inches
- Only the BACKBOX mounting options meets NEMA Type 3X (pending)

### Gaskets

STI-1316 Cover Gasket - Neoprene 0.070 in. dia. (included on Enclosed Flush & Enclosed Backbox)

STI-1318 3" Gasket - Neoprene 1/8" diameter

Mounting Gasket (embedded in housing at STI factory prior to shipping) - Two part polyurethane

STI-1326 1/2" or 3/4" Conduit Weather Gasket - Closed Cell IV-2

### Horn

	9V (Battery included)	12V	24V
· Low (95 dB @ 1 ft.)	40mA	38mA	22mA
· High (105 dB @ 1 ft.)	105mA	125mA	95mA
· Min. Operating Req.	2V @ 20mA	4V @ 20mA	4V @ 20mA

### Dry Contact Relay

- 30 VAC/VDC, 1A

### Temperature Range

- Electronics Operating Range: -40° to 120°F (-40° to 49°C) **Below -4°F (-20°C), a remote power source is recommended**
- Polycarbonate Rated: -40° to 284°F (-40° to 140°C)

## Warranty

Three year guarantee against breakage of polycarbonate in normal use (one year on electro mechanical and electronic components).

Electronic warranty form at [www.sti-usa.com/wc14](http://www.sti-usa.com/wc14).

## Important Notice (when used on fire systems)

The Universal Stopper is intended to be used in areas where the incidence of false fire alarms from manual pull stations is high or has proven to be a serious problem. Any disadvantage of this device is more than balanced when one considers the consequences of false fire alarms, especially if fire service personnel and equipment are responding to a false fire alarm when they are needed for a real fire somewhere else. Add to this, the disruption to the facility when false alarms occur. If you have, or may have, a problem with false fire alarms or physical/weather damage to your fire alarm activation devices, the Universal Stopper could prove invaluable. Avis important (en cas d'utilisation sur les r seaux d'incendie)

### Avis important (en cas d'utilisation sur les r seaux d'incendie)

Le Universal Stopper est destin tre utilis dans les zones o l'occurrence de fausses alertes d'incendie issues d'avertisseurs d'incendie manuels est lev e ou pr sente un probl me grave. Un quelconque inconv nient de ce dispositif est vite contrecarr par les cons quences des fausses alertes d'incendie, surtout lorsque le personnel et l' quipement des services d'incendie r agissent une fausse alerte d'incendie alors que leur intervention ailleurs sur un vrai incendie s'av re n cessaire en m me temps. cela s'ajoute l'agitation prouv e dans l' tablissement au moment du d clenchement d'une fausse alerte. Si vous rencontrez, ou risquez de rencontrer, un probl me avec les fausses alertes d'incendie ou avec l' ventuel endommagement par effet climatique ou physique de vos dispositifs de d clenchement des alertes d'incendie, le Universal Stopper pourra alors se r v ler d'une valeur inestimable.

## Installation Notes

- When used outdoors, the manual pull station must also be rated for outdoor use.
- UL Listing does not permit connection of horn relay contacts to fire alarm or life safety devices.
- According to UL Listing, models powered from an external power source cannot be supplied from the fire alarm panel.
- When properly installed, the operation of this cover will not interfere with the function of your life safety system.
- Horn operation and performance must be tested annually. Battery replacement is recommended annually dependent on usage and battery expiration date.
- Ensure the service pin is properly inserted in the service pin receptor to silence horn while performing installation or servicing horn.
- If mounting to an uneven surface, a backplate (STI-1314) is recommended to help ensure proper sealing to mounting surface.
- The backplate may be drilled if wire access or screw mounting holes are needed.

### Remarques sur l'installation

- L'avertisseur d'incendie manuel doit tre homologu pour une utilisation l'ext rieur en cas de recours une telle utilisation.
- L'homologation UL des contacts de relais n'autorise pas leur connexion une fonction d'alerte d'incendie ou de s curit des personnes.
- Selon l'homologation UL, les mod les aliment s par une source lectrique externe ne peuvent pas tre int gr s au panneau d'alerte d'incendie.
- Lorsqu'il est correctement install , le fonctionnement de ce couvercle ne provoquera aucune interf rence avec le fonctionnement de votre syst me de s curit des personnes.
- L'alarme sonore doit tre test e annuellement pour confirmer son bon fonctionnement. Il est recommand de remplacer la pile chaque ann e et ce en fonction du taux d'utilisation et de la validit de la pile.
- Assurez-vous de voir la goupille de service correctement ins r e dans son r cepteur afin de pouvoir d sactiver l'alarme sonore lors de l'installation ou de l'entretien de cette alarme.
- Dans le cas d'un montage sur une surface irr guli re, STI recommande l'utilisation du palastre STI-1280 pour garantir une tanch it ad quate contre la surface de montage.
- S'il est n cessaire d'acc der aux fils ou aux trous des vis de montage, le palastre peut tre perc tel que requis.

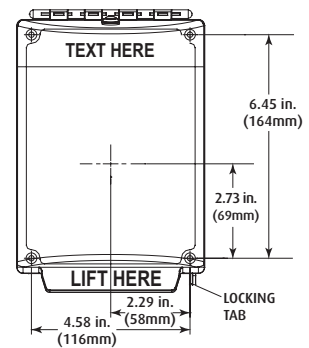


Fig. 1

## Installation Instructions

1. Center the pull station to the Universal Stopper with the help of the dimensions in Fig. 1. Open cover and use the mounting frame or optional backplate to mark the mounting hole locations as in Fig. 1. **Be sure the entire cover travel will not interfere with operation of the pull station or other safety system equipment when installed.**

2. If drilling into wood, four #6 x 1 1/4" screws (provided) should be used without anchors and the mounting holes should be drilled 7/64" diameter to a depth of 1 1/4". If drilling into masonry or drywall (sheet rock), the wall anchors (provided) should be used and the mounting holes drilled 3/16" diameter to a depth of 1 1/4".
3. Refer to Fig. 2, 3 and 4 for illustrations of the different mounting configurations (BACKBOX, FLUSH, SURFACE). For additional seal reliability, a silicone sealant may be applied between optional backplate and wall.
4. (For the BACKBOX mounting option only) If routing conduit from above, run the conduit through the hole in the top of the housing.
5. (For the BACKBOX mounting option only) If routing from below, use a flat head screwdriver or coin to remove the NPT Plug. Then knock out a hole in the bottom and run the conduit up through the bottom of the housing. Apply thread sealant. Screw the NPT plug back into the threaded top of the housing.

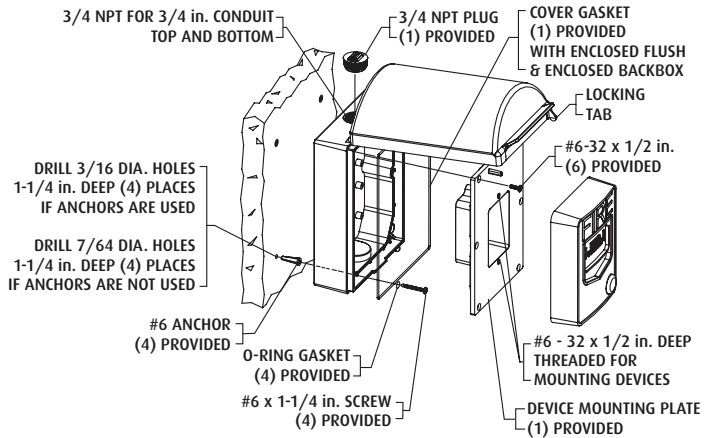


Fig. 2 - BACKBOX MOUNTING OPTION

6. (For the SURFACE mounting option only) Note that the inserts fit flush to the housing only in one orientation (see Fig. 4). Prior to applying either of the Conduit Weather Gaskets, ensure proper orientation and fit of the desired inserts from the top or the bottom of the housing.
7. (For the SURFACE mounting option only) After noting the proper insert orientation, fit the appropriate Conduit Weather Gasket size (1/2" or 3/4") to the conduit. Then fit the gasket to the Conduit Insert or directly to the housing knock-out. Repeat this step with the appropriate installation on the opposite. **For additional seal reliability, a bead of silicone may be applied to the conduit fitting.**
8. (For the SURFACE mounting option only) Use the 3" gaskets (provided) to complete the seal across the top and bottom insert locations. Overlap 1/8" of the existing Mounting Gasket on the Universal Stopper body, run the cord into the preformed channel until it overlaps 1/8" of the opposing Mounting Gasket. **The 3" gasket may need to be trimmed for a proper fit and seal.**
9. Align mounting holes in frame to the screw holes made in the wall. If applicable, ensure a proper seal is made between the wall and the Mounting Gasket embedded on the Universal Stopper. If needed, use optional STI Backplate (STI-1314).
10. (For the BACKBOX mounting option only) Insert the #6 x 1 1/4" Phillips Pan Head Screws (provided) into the #6 O-rings STI-01317 (provided) to seal the Backbox mounting holes.
11. Put the #6 x 1 1/4" Phillips Pan Head Screws (provided) through the frame holes into the drilled screw holes and tighten to mounting surface.

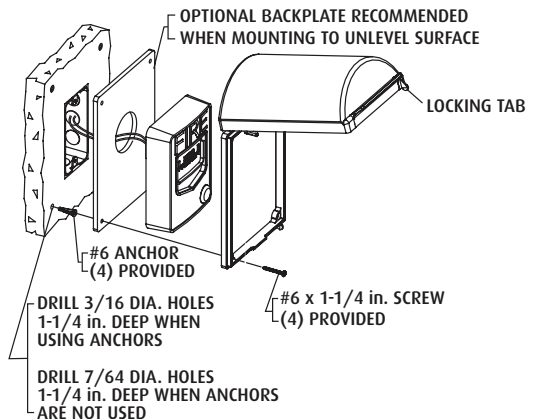
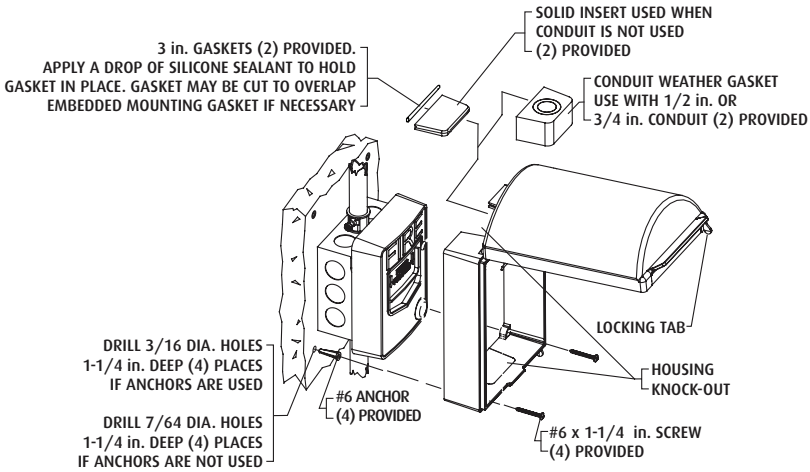
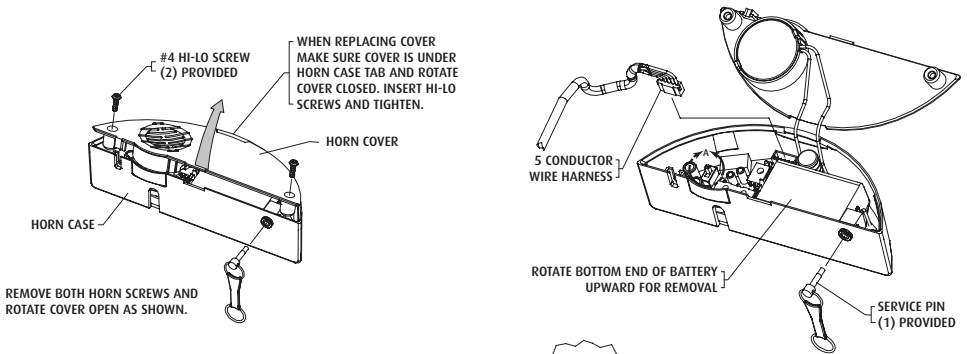


Fig. 3 - FLUSH MOUNTING OPTION

12. Make any external connections for remote power or relay options if needed. (When using HORN option refer to Fig. 5 for wiring details.) **9V battery acts as backup power source when using remote power.**
13. (For BACKBOX mounting option) Place the Device Mounting Plate STI-01310 into the raised wall area with the horn activation tab oriented sticking up in the upper left. Ensure the wire harness is not pinched underneath the plate. Use the six #6-32 x 1/2" screws to secure the Device Mounting Plate to the housing body.
14. (For BACKBOX mounting option only) Install desired powered device to the mounting screws on the Device Mounting Plate.
15. Close cover.
16. (When using LOCKING TAB feature) Not for use in fire or emergency signaling applications. With the cover closed, ensure the locking tabs are overlapping. With the cover remaining closed, drill a 1/8" hole in the center of the locking tabs.

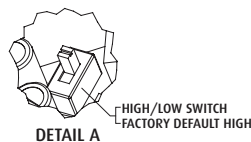


**Fig. 4 - SURFACE MOUNTING OPTION**



Wire	Description
Red	+12V - 24V
Black	-12V - 24V
Blue	Common
Green	NC - Norm Closed
Yellow	NO - Norm Open

**Fig. 5**



17. (When using HORN option) Remove the Service Pin and horn should sound. Close cover and horn should silence.
18. (When using HORN option) To test switch activation, open cover and horn should sound. Close cover and horn should silence. **When performing annual battery test/replacement or whenever servicing alarm system, insert the Service Pin into the Service Pin Receptor to prevent horn from sounding. Remember to remove Service Pin to return to normal operation.**
19. When using LOCKING TAB feature (not for use in fire or emergency signaling applications), insert the Breakaway Seal SUB-65 completely into the Locking Tab. Then insert the tip of the Breakaway Seal into the hole in the Breakaway Seal from the side that reads "ENTER." Pull the pin through until tight. Not for use with fire pull stations.

## Gasket Installation

Use of gaskets is necessary to ensure a proper seal in weatherproof applications. The Universal Stopper ships complete with all necessary gaskets and should be used accordingly. The Mounting Gasket is included on all Universal Stopper products and is embedded in the STI factory prior to shipping. Two 3" gaskets are shipped with the SURFACE mount Universal Stopper, refer to Step 8 in the installation instructions. Each 3" gasket is intended to be used with the inserts also shipped with the SURFACE mount Universal Stopper. To install, the insert should first be fitted in place in the correct orientation. Then, overlap 1/8" of the existing Mounting Gasket on the Universal Stopper housing, run the cord into the preformed channel until it overlaps 1/8" of the opposing Mounting Gasket.

## Horn Battery Replacement and Hi/Lo Volume Changing Instructions

1. Obtain the Universal Stopper Service Pin, a small Phillips screwdriver, a 3/32" allen wrench (if desired) and replacement 9V battery.
2. Open the Universal Stopper cover. The horn should sound. Insert the Service Pin into the Service Pin Receptor. The horn should silence.
3. (If desired) While holding the horn with one hand, remove the button head screw on the front of the cover. Then, perform the following actions with the horn separately.
4. Use the Phillips screwdriver to remove the two horn housing cover screws.
5. Replace the battery with a 9V battery only.
6. (If desired) Change the Hi/Lo switch position (Fig. 5, Detail A).
7. Replace the horn housing cover and screws.
8. (To be performed if horn was removed) Orient the horn at the top of the Universal Stopper cover, and replace the button head screw.
9. Remove the Service Pin and horn should sound. Close cover and horn should silence.

## Polycarbonate Cleaning Instructions

Rinse with water to remove abrasive dust and dirt. Wash with soap or mild detergent, using a soft cloth. Rinse once more then dry with a soft cloth or chamois. Exercise caution when using water inside enclosure. Make sure unit is completely dry inside before reassembling. To remove grease or wet paint from exterior of cover, rub gently with a soft cloth thoroughly wetted with Naptha. Then wash and rinse. **Do not use razor blades.**

## Options Available


Part Number	Description	Flush	Surface	Flush Enclosed Backbox	Enclosed Backbox
STI-1314	Universal Stopper Backplate	X	X		
STI-6602*	Horn Assembly	X	X		X
SUB-319	Wiring harness for remote power	X	X		X
SUB-65	Breakaway Seal (qty. 5)	X	X	X	X
EA135	Service Pin	X	X		X

\*Available in red, green, blue, yellow, white or black.


## Product Dimensions

### EXTERNAL DIMENSIONS

- FLUSH 5.4 W x 8.15 H x 2.66 in. D (137 x 207 x 68 mm)
- SURFACE 5.4 W x 8.15 H x 4.00 in. D (137 x 207 x 102 mm)
- ENCLOSED FLUSH BACKBOX 5.4 W x 8.15 H x 2.8 in. D (137 x 207 x 71 mm)
- ENCLOSED BACKBOX 5.4 W x 8.15 H x 4.00 in. D (137 x 207 x 102 mm)

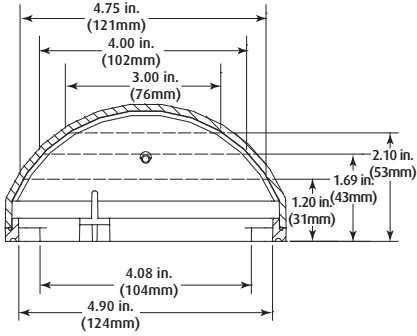


END VIEW

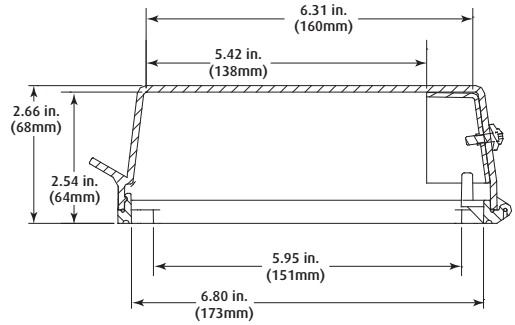


SIDE VIEW

### FLUSH MOUNT DIMENSIONS

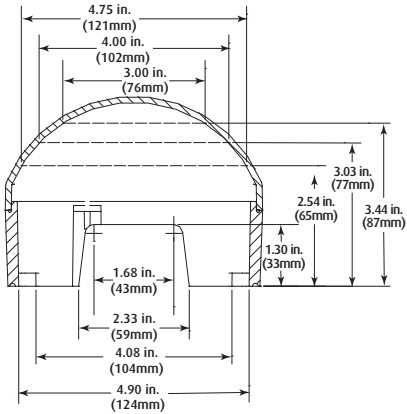


END VIEW

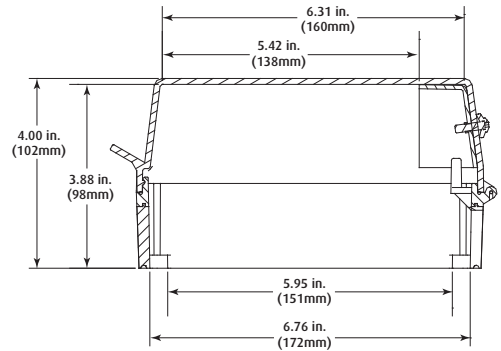


SIDE VIEW

### SURFACE MOUNT DIMENSIONS

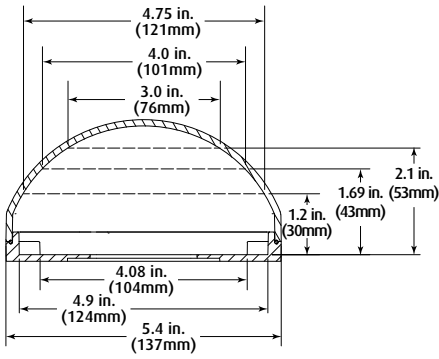


END VIEW

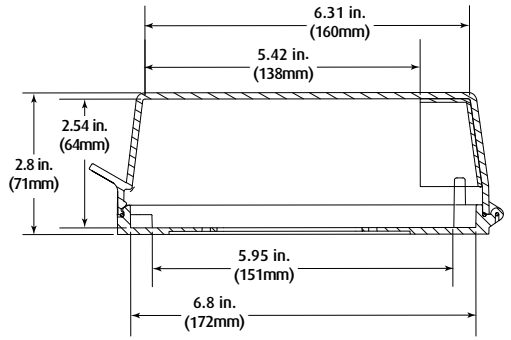


SIDE VIEW

**ENCLOSED FLUSH BACKBOX DIMENSIONS**

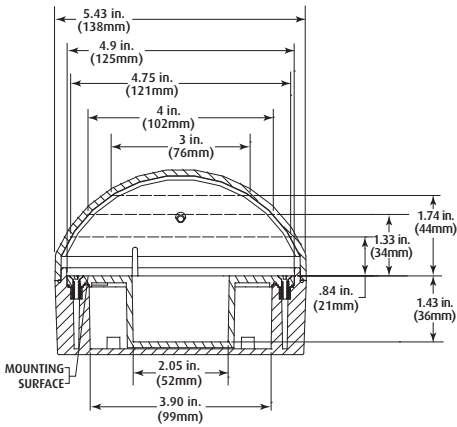

END VIEW

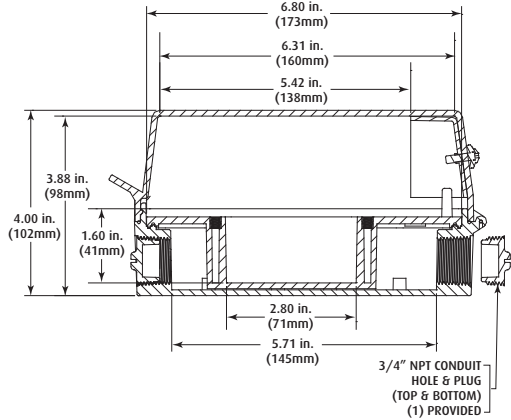

SIDE VIEW

**ENCLOSED BACKBOX DIMENSIONS**



**Safety Technology International, Inc.**

2306 Airport Rd • Waterford, MI 48327  
 Phone: 248-673-9898 • Fax: 248-673-1246  
 info@sti-usa.com • www.sti-usa.com

**Safety Technology International (Europe) Ltd.**

Unit 49G Pipers Road • Park Farm Industrial Estate • Redditch  
 Worcestershire • B98 0HU • England • Tel: 44 (0) 1527 520 999  
 Fax: 44 (0) 1527 501 999 • Freephone: 0800 085 1678 (UK only)  
 E-mail: info@sti-europe.com • Web: www.sti-europe.com

